



Firmware Update HV module

Start isegCanHvControl, a HV module have to be displayed in the main window isegCANHVControl.


Enter the password „hex2flashEHS“ via the button with the lock symbol.

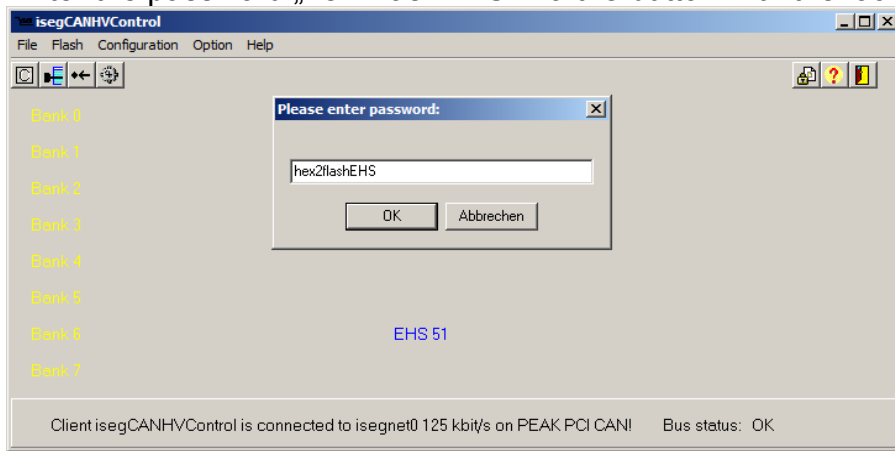


Open the update window via the menu Flash – EHS, EDS, EMS, ELS, EBS.

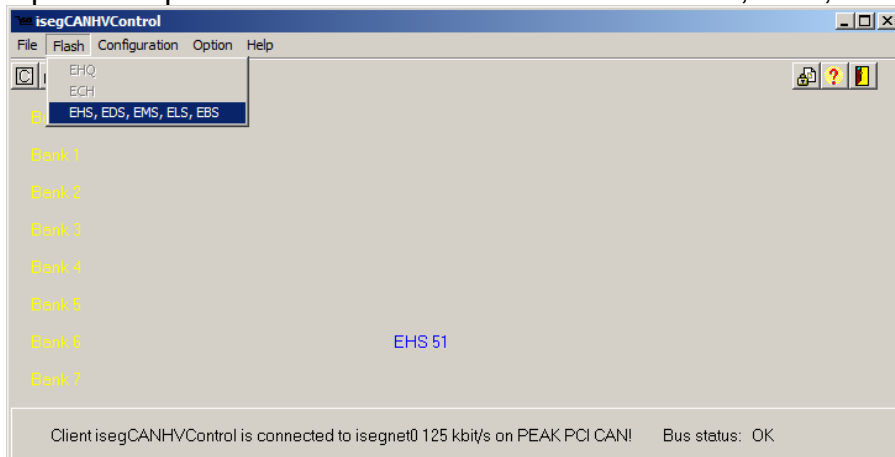


Select the file E08F2_421.hex via the button file open.

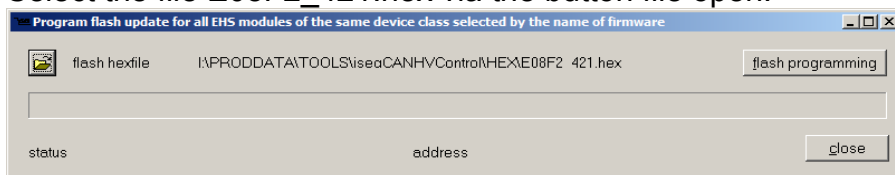

Start the update process via the button „flash programming“.

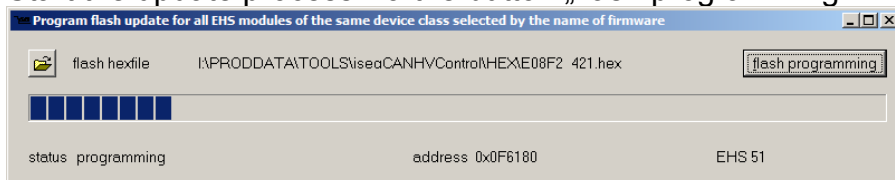

A PostFlash process will be executed at the end of the update.

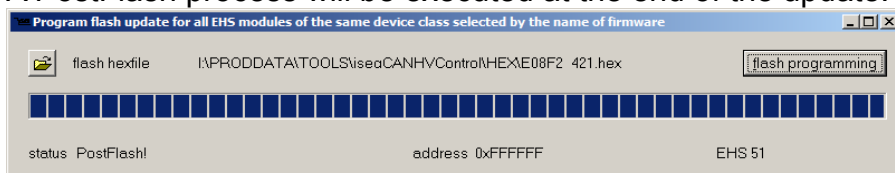

The update is finished.

