

## Technical documentation

Last changed on: 2022-12-12

# NHR series

Versatile High Precision HV Module in NIM Standard with reversible polarity

- 4 channel, polarity electronically switchable
- versatile 6kV-channel with switchable HV-generation modes: 6kV/2mA, 4kV/3mA and 2kV/4mA or fixed-mode 2kV/6mA-channel
- High Precision and Standard version (High Precision with second current measurement range 20 $\mu$ A for high resolution)
- common floating ground
- ultra low ripple and noise
- front panel control with 1,44" TFT display
- voltage and current control per channel
- programmable parameters
- hardware voltage and current limits
- USB and CAN interface



## Document history

| Version | Date       | Major changes  |
|---------|------------|--|
| 2.7     | 2022-12-12 | improved documentation (option IU is default)  |
| 2.6     | 2022-01-17 | improved documentation and drawing, Option VCT, connectors cable side, pin assignment, overview, Main Screen Menu, bug fix |
| 2.5     | 2021-03-17 | improved documentation, Item code revision and customization   |
| 2.4     | 2021-01-26 | improved documentation, Added Accessories (Z515405), improved Glossary, SCPI control                                       |
| 2.3     | 2020-10-27 | improved documentation, "IU" default configuration   |
| 2.2     | 2020-09-23 | Improved description Option Lower output current   |
| 2.1     | 2020-04-14 | improved documentation Technical data $V_{nom}$  |
| 2.0     | 2019-11-25 | safety information, glossary, improved documentation   |
| 1.4     | 2019-11-12 | improved documentation   |
| 1.3     | 2019-07-30 | improved documentation   |
| 1.2     | 2019-05-21 | troubleshooting  |
| 1.1     | 2018-10-01 | Notes revised  |
|         | 2018-09-20 | Potential difference reduced, Layout fixes   |
| 1.0     | 2017-06-14 | Initial version  |

## Disclaimer / Copyright

Copyright © 2022 by iseg Spezialelektronik GmbH / Germany. All Rights Reserved.

This document is under copyright of iseg Spezialelektronik GmbH, Germany. It is forbidden to copy, extract parts, duplicate for any kind of publication without a written permission of iseg Spezialelektronik GmbH. This information has been prepared for assisting operation and maintenance personnel to enable efficient use.

**The information in this manual is subject to change without notice. We take no responsibility for any mistake in the document. We reserve the right to make changes in the product design without reservation and without notification to the users. We decline all responsibility for damages and injuries caused by an improper use of the device.**





# Safety

This section contains important security information for the installation and operation of the device. Failure to follow safety instructions and warnings can result in serious injury or death and property damage.

Safety and operating instructions must be read carefully before starting any operation.

We decline all responsibility for damages and injuries caused which may arise from improper use of our equipment.

## Depiction of the safety instructions

|  |   |
|--|---|
| <b>DANGER!</b>   |   |
| <br>DANGER!       | <p>“Danger!” indicates a severe injury hazard. The non-observance of safety instructions marked as “Danger!” will lead to possible injury or death.</p> |
| <b>WARNING!</b>  |   |
| <br>WARNING!      | <p>“Warning!” indicates an injury hazard. The non-observance of safety instructions marked as “Warning!” could lead to possible injury or death.</p>    |
| <b>CAUTION!</b>  |   |
| <br>CAUTION!    | <p>Advice marked as “Caution!” describe actions to avoid possible damages to property.</p>  |
| <b>INFORMATION</b>   |   |
| <br>INFORMATION | <p>Advice marked as “Information” give important information.</p>   |



Read the manual.



Attention high voltage!



Important information.

## Intended Use

The device may only be operated within the limits specified in the data sheet. The permissible ambient conditions (temperature, humidity) must be observed. The device is designed exclusively for the generation of high voltage as specified in the data sheet. Any other use not specified by the manufacturer is not intended. The manufacturer is not liable for any damage resulting from improper use.

## Qualification of personnel

A qualified person is someone who is able to assess the work assigned to him, recognize possible dangers and take suitable safety measures on the basis of his technical training, his knowledge and experience as well as his knowledge of the relevant regulations.

## General safety instructions

- Observe the valid regulations for accident prevention and environmental protection.
- Observe the safety regulations of the country in which the product is used.
- Observe the technical data and environmental conditions specified in the product documentation.
- You may only put the product into operation after it has been established that the high-voltage device complies with the country-specific regulations, safety regulations and standards of the application.
- The high-voltage power supply unit may only be installed by qualified personnel.



## Important safety instructions

### WARNING!



WARNING!

To avoid injury of users it is not allowed to open the unit. There are no parts which can be maintained by users inside of the unit. Opening the unit will void the warranty.

### WARNING!



WARNING!

The high-voltage cable must be professionally connected to the consumer/load and the connection insulated with the appropriate dielectric strength. Do not power the consumer/load outside of its specified range.

### WARNING!



WARNING!

Before connecting or disconnecting HV cables or any operation on the HV output or the application, the unit has to be switched off and discharge of residual voltage has to be finished. Depending on application residual voltages can be present for long time periods.

### WARNING!



WARNING!

Do not operate the unit in wet or damp conditions.

### WARNING!



WARNING!

Do not operate the unit in an explosive atmosphere.

### WARNING!



WARNING!

Do not operate the unit if you suspect the unit or the connected equipment to be damaged.

**CAUTION!**



CAUTION!

When installing the units, make sure that an air flow through the corresponding air inlet and outlet openings is possible.

**CAUTION!**



CAUTION!

When controlling, with software, the high voltage systems, make sure that nobody is near the high voltage or can be injured.

**INFORMATION**



INFORMATION

Please check the compatibility with the devices used.

# Table of Contents

|   |           |
|---|-----------|
| Document history                                  | 2         |
| Disclaimer / Copyright                            | 2         |
| <b>Safety</b>                                     | <b>3</b>  |
| Depiction of the safety instructions              | 3         |
| Intended Use                                      | 4         |
| Qualification of personnel                        | 4         |
| General safety instructions                       | 4         |
| Important safety instructions                     | 5         |
| <b>1. General description</b>                     | <b>9</b>  |
| <b>2. Package contents / Accessories</b>          | <b>9</b>  |
| <b>3. Overview</b>                                | <b>10</b> |
| <b>4. Technical Data</b>                          | <b>13</b> |
| 4.1 Configurations                                | 14        |
| 4.2 Options                                       | 15        |
| <b>5. Handling</b>                                | <b>15</b> |
| 5.1 Connection                                    | 15        |
| 5.2 Front Panel Control                           | 16        |
| 5.2.1. Main Screen (Channel List)                 | 17        |
| 5.2.2. Menu Screen                                | 19        |
| 5.2.3. Editing Menu Entries                       | 21        |
| 5.2.4. Channel Details                            | 22        |
| 5.2.5. Editing Channel Set Values                 | 23        |
| 5.2.6. Menu Structure                             | 24        |
| 5.3 Channel Switches and LEDs                     | 25        |
| 5.4 Remote Control                                | 25        |
| 5.5 Polarity and Output-Mode selection            | 25        |
| 5.6 Protection Features                           | 26        |
| 5.6.1. Hardware Limit                             | 26        |
| 5.6.2. Safety Loop                                | 26        |
| 5.6.3. Single channel Inhibit                     | 27        |
| 5.7 Floating GND configuration                    | 28        |
| 5.8 Current limitation                            | 28        |
| 5.8.1. Constant Current Mode                      | 28        |
| 5.8.2. KillEnable                                 | 28        |
| 5.8.3. Delayed Trip                               | 29        |
| <b>6. Options</b>                                 | <b>30</b> |
| 6.1 VCT – voltage correction by temperature       | 30        |
| 6.1.1. Technical data                             | 30        |
| 6.1.2. Operation                                  | 30        |
| 6.2 Single Channel Inhibit (IU, ID, NIU, NID)     | 31        |
| 6.3 L – Lower output current (HP only)            | 31        |
| 6.4 T10 – Lower temperature coefficient (HP only) | 31        |
| <b>7. Dimensional drawings</b>                    | <b>32</b> |
| <b>8. Connectors assignments</b>                  | <b>35</b> |
| <b>9. PIN assignments</b>                         | <b>36</b> |
| 9.1 Safety Loop                                   | 36        |
| 9.2 CAN   | 36        |
| 9.3 NIM standard compliant connector              | 36        |
| 9.4 VTC   | 37        |
| 9.5 Inhibit                                       | 37        |

|                                   |           |
|-----------------------------------|-----------|
| <b>10. Accessories</b>            | <b>37</b> |
| <b>11. Order guides</b>           | <b>38</b> |
| <b>12. Appendix</b>               | <b>39</b> |
| <b>13. Glossary</b>               | <b>40</b> |
| <b>14. Warranty &amp; Service</b> | <b>41</b> |
| <b>15. Disposal</b>               | <b>41</b> |
| <b>16. Manufacturer contact</b>   | <b>41</b> |

# 1. General description

**CAUTION!**



CAUTION!

The devices must only be used in combination with iseg approved crates.

The iseg NHR modules are multi-channel high voltage power supplies in 1/12 NIM standard cassette format.

The NHR provides up to 4 channels, each with an independent voltage and current control and electronically reversible polarity. The 6kV channel provides a maximum versatility: with three electronically switchable HV-output modes it can supply 4mA up to voltages of 2kV, 3mA up to 4kV and 2mA up to 6kV. Alternatively the NHR can be equipped with cost efficient 2kV/6mA channels.

Several NHR modules can be daisy-chained by CAN and controlled for example by iseg iCS system. The hardware is made of best components such as 24 bit ADC and 20 bit DAC, the approved front panel control of the NHR series with TFT display allows user-friendly intuitive operation.

The NHR is equipped with a comprehensive set of security features like over voltage and short circuit protection, hardware limits and much more.

## 2. Package contents / Accessories

| Hardware   | included                        | optional                   |
|--|---------------------------------|----------------------------|
| NHR 20 xx  | 2 channel Standard module       | See chapter 10 Accessories |
| NHR 40 xx  | 4 channel Standard module       |                            |
| NHR 22 xx  | 2 channel High Precision module |                            |
| NHR 42 xx  | 4 channel High Precision module |                            |
| Notes:<br>replacement characters: x – depending on model, see 4.1 Configurations |                                 |                            |

Table 1: Package contents

### 3. Overview

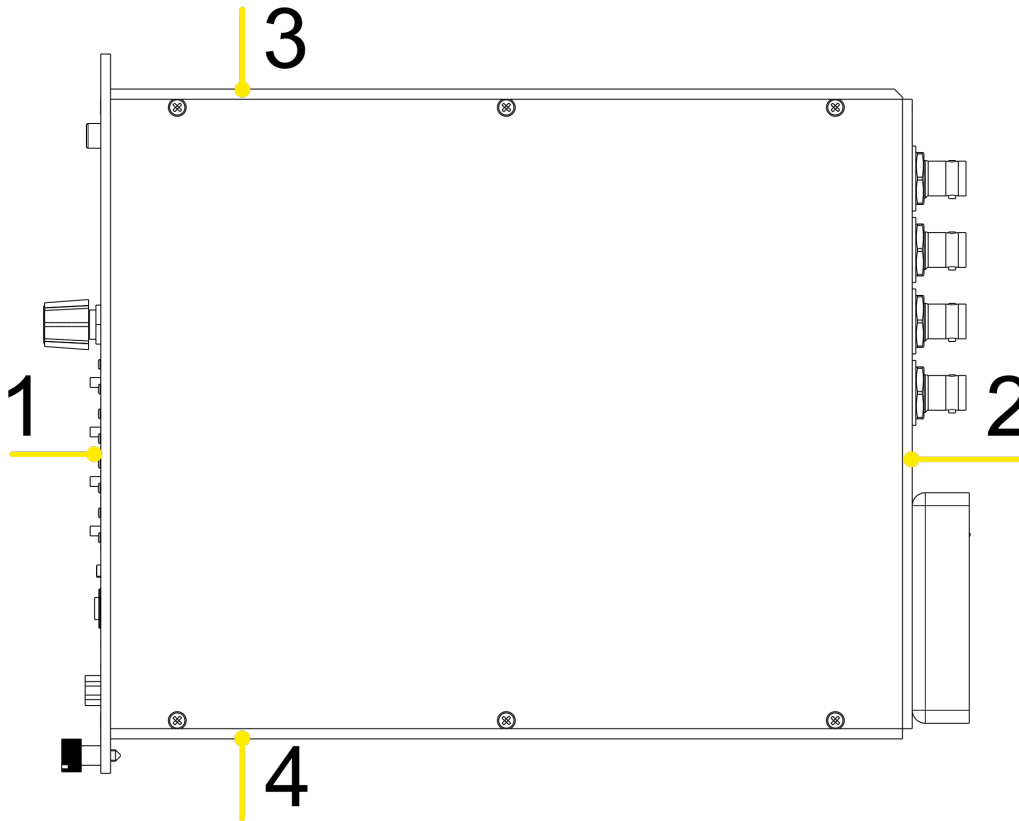


Figure 1: side view 4 channels module

| Number | Description | Description                            | Detailed explanation in chapter |
|--------|-------------|--|---------------------------------|
| [1]    | Front side  | Display, controls, Can and safety loop | 5.2 Front Panel Control         |
| [2]    | Back side   | High-voltage output, power supply      | 8 Connectors assignments        |
| [3]    | Top side    | Jumper (CFG/CG)                        | 5.7 Floating GND configuration  |
| [4]    | Bottom side | Jumper (SL)                            | 5.6.2 Safety Loop               |

Table 2: description Overview

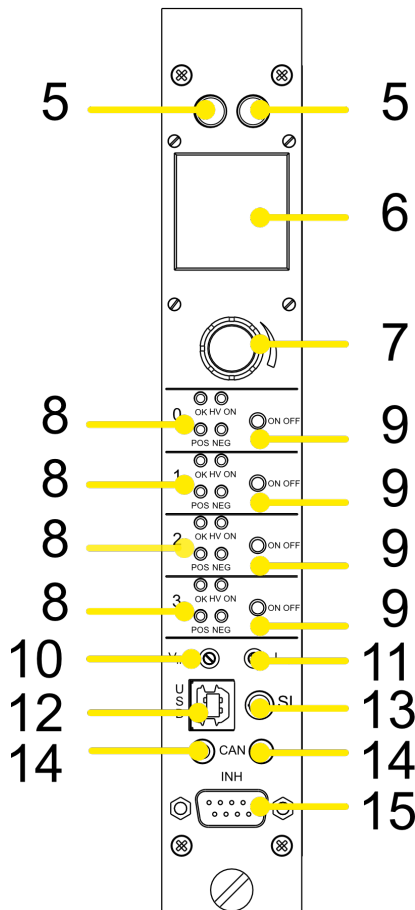


Figure 2: front 4ch module

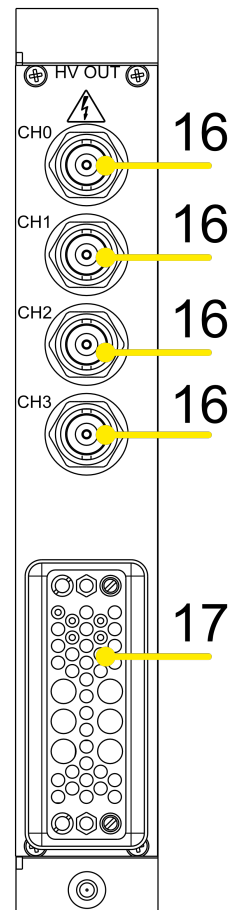


Figure 3: back 4ch module

| Number              | Description         | Description   | Detailed explanation in chapter  |
|---------------------|---------------------|---|--|
| [5]                 | button              | for navigation inside the menus   | 5.2 Front Panel Control  |
| [6]                 | display             | shows monitor and control values  | 5.2 Front Panel Control  |
| [7]                 | rotary encoder      | button to navigate in menu and set values                                 | 5.2 Front Panel Control  |
| [8] <sup>(1)</sup>  | Status Led          | indicate the selected polarity, signals condition, signals output voltage | 5.2 Front Panel Control, 5.3 Channel Switches and LEDs   |
| [9] <sup>(1)</sup>  | switch              | channel on or off   | 5.2 Front Panel Control  |
| [10]                | Limit potentiometer | Hardware limit $V_{max}$  | 5.2 Front Panel Control, 5.6.1 Hardware Limit  |
| [11]                | Limit potentiometer | Hardware limit $I_{max}$  | 5.2 Front Panel Control, 5.6.1 Hardware Limit  |
| [12]                | USB connector       | USB connector   | 5.2 Front Panel Control, 5.4 Remote Control  |
| [13]                | SL connector        | Safety Loop connector   | 5.2 Front Panel Control, 5.6.2 Safety Loop   |
| [14]                | CAN connector       |   | 5.2 Front Panel Control, 5.4 Remote Control  |
| [15]                | INH connector       | Inhibit connector   | 5.2 Front Panel Control, 5.6.3 Single channel Inhibit, 6.2 Single Channel Inhibit (IU, ID, NIU, NID) |
| [16] <sup>(1)</sup> | HV connector        | High voltages connector   | 8 Connectors assignments   |
| [17]                | NIM connector       | supply connector  | 8 Connectors assignments   |

Notes:  
<sup>1)</sup> - depending on model (2 channels or 4 channels)

Table 3: description front and back

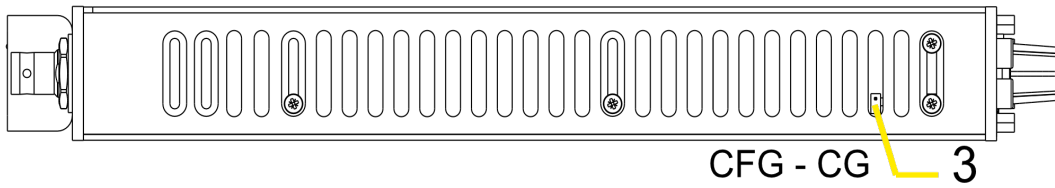


Figure 4: top side

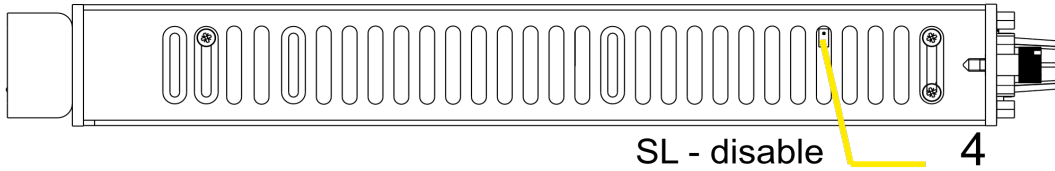


Figure 5: back side

| Number | Description | Detailed explanation in chapter |                                |
|--------|-------------|---------------------------------|--------------------------------|
| [3]    | Jumper      | Jumper (CFG/CG)                 | 5.7 Floating GND configuration |
| [4]    | Jumper      | Jumper (SL)                     | 5.6.2 Safety Loop              |

Table 4



## 4. Technical Data

| SPECIFICATIONS   | NHR Standard  | NHR High Precision  |
|--|---|---|
| Polarity   | Electronically switchable   |   |
| Floating principle   | Common Floating Ground  |   |
| Potential difference   | Max. 39 V channel/GND   |   |
| Ripple and noise (f > 10 Hz)   | < 10 mV <sub>p-p</sub>  | < 2 – 3 mV <sub>p-p</sub>                                 |
| Ripple and noise (f > 1 kHz)   | < 3 mV <sub>p-p</sub>   | < 2 mV <sub>p-p</sub>                                     |
| Ripple and noise (10 Hz – 0.1Hz)   |   | < 5 – 10 mV <sub>p-p</sub>                                |
| <b>Stability</b>   |   |   |
| Stability – [ $\Delta V_{out}$ vs. $\Delta V_{in}$ ]   | $2 \cdot 10^{-4} \cdot V_{mode}$  | $1 \cdot 10^{-4} \cdot V_{mode}$                          |
| Stability – [ $\Delta V_{out}$ vs. $\Delta R_{load}$ ]   | $2 \cdot 10^{-4} \cdot V_{mode}$  | $1 \cdot 10^{-4} \cdot V_{mode}$                          |
| Temperature coefficient  | 50 ppm/K  | 30 ppm/K   10 ppm/K<br>(OPTION TC, see chapter 6 Options) |
| <b>Resolution</b>  |   |   |
| Resolution voltage setting   | $2 \cdot 10^{-6} \cdot V_{nom}$   |   |
| Resolution current setting   | $2 \cdot 10^{-6} \cdot I_{nom}$   |   |
| Resolution voltage measurement <sup>(1)</sup>  | $2 \cdot 10^{-6} \cdot V_{nom}$   | $1 \cdot 10^{-6} \cdot V_{nom}$                           |
| Resolution current measurement - full range <sup>(1)</sup>   | $2 \cdot 10^{-6} \cdot I_{nom}$   | $1 \cdot 10^{-6} \cdot I_{nom}$                           |
| Resolution current measurement [ $I_{out} < 20 \mu A$ ]<br>(2nd range) <sup>(1) (3)</sup>  | n/a   | 50 pA   |
| <b>Measurement accuracy</b> – The measurement accuracy is guaranteed in the range $1\% \cdot V_{mode} < V_{out} < V_{mode}$ and for 1 year |   |   |
| Accuracy voltage measurement   | $\pm (0.01\% \cdot V_{out} + 0.02\% \cdot V_{nom})$   | $\pm (0.01\% \cdot V_{out} + 0.01\% \cdot V_{nom})$       |
| Accuracy current measurement – full range  | $\pm (0.01\% \cdot I_{out} + 0.02\% \cdot I_{nom})$   | $\pm (0.01\% \cdot I_{out} + 0.01\% \cdot I_{nom})$       |
| Accuracy current measurement<br>(2nd range) <sup>(3)</sup>   | n/a   | $\pm (0.01\% \cdot I_{out} + 4 \text{ nA})$               |
| Sample rates (SPS)   | 5, 10, 25, 50, 60, 100, <b>500</b> <sup>(2)</sup>   | 5, 10, 25, <b>50</b> <sup>(2)</sup> , 60, 100, 500        |
| Digital filter averages  | 1, 16, <b>64</b> <sup>(2)</sup> , 256, 512, 1024  |   |
| Hardware limits  | Potentiometer per module [ $V_{max} / I_{max}$ ]; relative to $V_{nom} / I_{nom}$   |   |
| Voltage ramp   | $1 \cdot 10^{-6} \cdot V_{nom}/s$ up to $0.2 \cdot V_{nom}/s$   opt. up to $0.75 \cdot V_{nom}/s$   |   |
| Digital interface  | USB interface (potential free),<br>CAN interface (potential free)   |   |
| Power requirements of supply voltages  | $\pm 24 \text{ V}$ : 1.5 A at full load (0.5 A with option L,<br>(see Table 7: Technical data: Options and order information),<br>0.5 A with no load at $V_{nom}$ |   |
| Operating mode   | Full module and channel control via: Front panel,<br>USB interface: iseg SCPI,<br>CAN interface: EDCP (Enhanced Device Control Protocol)                          |   |
| Module status  | green LED turns on if the channel has the status “Ready”<br>yellow LED turns on if the channel has the status “HV ON”   |   |
| HV connector   | SHV, Figure 17  |   |
| System connector   | NIM standard compliant connector, Figure 19   |   |

| SPECIFICATIONS (continued)   | NHR Standard   | NHR High Precision |
|--|--|--------------------|
| Safety Loop socket   | Lemo 2pole Figure 20   |                    |
| Single channel inhibit connector   | SUB-D9 male, Figure 18   |                    |
| Protection   | INHIBIT, Safety loop, short circuit, overload, hardware V/I limits<br>Overload and short circuit protected<br><b>(ATTENTION: there is only one short circuit or arc per second allowed!)</b> |                    |
| Case   | 1/12 NIM standard cassette   |                    |
| Operating temperature  | 0 ... 40 °C  |                    |
| Storage temperature  | -20 ... 60 °C  |                    |
| Humidity   | 20 – 80 %, not condensing  |                    |
| Notes:<br><sup>1)</sup> The resolution of measurable values depends on the settings of the sampling rate and the digital filter!<br><sup>2)</sup> Standard factory settings<br><sup>3)</sup> not available with Option L |  |                    |

Table 5: Technical data: Specifications

## 4.1 Configurations

| CONFIGURATIONS NHR   |    |           |                  |                  |                             |               |                |  |                     |                        |  |
|--|----|-----------|------------------|------------------|-----------------------------|---------------|----------------|--|---------------------|------------------------|--|
| Type   | Ch | Precision | V <sub>nom</sub> | I <sub>nom</sub> | Ripple (mV <sub>p-p</sub> ) |               |                | HV output mode<br>(V <sub>mode</sub> / I <sub>mode</sub> ) | Item Code           | Options <sup>(1)</sup> |  |
|  |    |           |                  |                  | >1kHz                       | 10Hz-<br>1kHz | 0.1Hz-<br>10Hz |  |                     |                        |  |
| NHR 20 20  | 2  | Standard  | 2000 V           | 6 mA             | 3                           | 10            | n/a            | 2 kV / 6 mA  | NR020020R605oooccrk | VCT, ID                |  |
| NHR 20 60  | 2  | Standard  | 6000 V           | 4 mA             | 3                           | 10            | n/a            | 6 kV / 2mA<br>4kV / 3mA<br>2kV / 4mA                       | NR020060R405oooccrk | VCT, ID                |  |
| NHR 40 20  | 4  | Standard  | 2000 V           | 6 mA             | 3                           | 10            | n/a            | 2 kV / 6 mA  | NR040020R605oooccrk | VCT, ID                |  |
| NHR 40 60  | 4  | Standard  | 6000 V           | 4 mA             | 3                           | 10            | n/a            | 6 kV / 2mA<br>4kV / 3mA<br>2kV / 4mA                       | NR040060R405oooccrk | VCT, ID                |  |
| NHR 22 20  | 2  | High      | 2000 V           | 6 mA             | 2                           | 2             | 5              | 2 kV / 6 mA  | NR022020R605oooccrk | VCT, ID, TC, L         |  |
| NHR 22 60  | 2  | High      | 6000 V           | 4 mA             | 2                           | 3             | 10             | 6 kV / 2mA<br>4kV / 3mA<br>2kV / 4mA                       | NR022060R405oooccrk | VCT, ID, TC, L         |  |
| NHR 42 20  | 4  | High      | 2000 V           | 6 mA             | 2                           | 2             | 5              | 2 kV / 6 mA  | NR042020R605oooccrk | VCT, ID, TC, L         |  |
| NHR 42 60  | 4  | High      | 6000 V           | 4 mA             | 2                           | 3             | 10             | 6 kV / 2mA<br>4kV / 3mA<br>2kV / 4mA                       | NR042060R405oooccrk | VCT, ID, TC, L         |  |
| Notes:<br><sup>1)</sup> - the "IU" option is always preset (default). "ID" must be selected when ordering. For more information, see chapter 5.6.3 Single channel Inhibit<br>replacement characters: o – options, c – connector, r – revision, k – customization |    |           |                  |                  |                             |               |                |  |                     |                        |  |

Table 6: Technical data: Configurations

## 4.2 Options

| OPTIONS / ORDER INFO                         | INFO                               | EXAMPLE           | ITEM CODE HEX CODE |
|--|------------------------------------|-------------------|--------------------|
| SINGLE CHANNEL INHIBIT – down                | <b>ID</b>                          |                   | <b>400</b>         |
| SINGLE CHANNEL INHIBIT – up                  | <b>IU</b> <sup>(2)</sup>           |                   | <b>000</b>         |
| VOLTAGE CORRECTION by TEMPERATURE            | <b>VCT</b>                         |                   | <b>008</b>         |
| LOWER TEMPERATURE COEFFICIENT <sup>(1)</sup> | <b>TC</b>                          |                   | <b>004</b>         |
| LOWER OUTPUT CURRENT <sup>(1)</sup>          | <b>L</b> ( $I_{nom} = 100 \mu A$ ) | NHR 4260 <b>L</b> | –                  |

Notes:  
<sup>(1)</sup> - Requires NHR "High Precision" Series  
<sup>(2)</sup> - the "IU" option is always preset (default). "ID" must be selected when ordering. For more information, see chapter 5.6.3 Single channel Inhibit

Table 7: Technical data: Options and order information

## 5. Handling

### 5.1 Connection

The supply voltages are connected to the module via the NIM-connector on the rear side of the module. An USB connector and two 3,5mm audio jack connectors for the CAN interface are located on the front panel, see Figure 6: NHR 4channel front. The second CAN connector can be used to daisy-chain several NHR and/or NHS modules.

## 5.2 Front Panel Control

**(1) – Context sensitive**

buttons left and right for navigation inside the menus

**(1) – Context sensitive**

buttons left and right for navigation inside the menus

**(2) – Display**

shows monitor and control values

**(3) – Rotary encoder**

with push button to navigate in menu and set values

**(9) – LED „OK“**

signals condition of the corresponding channel

**(9) – LED „HV ON“**

signals a measured output voltage at the corresponding channel

**(9) – LED „POS“ and „NEG“**

indicate the selected polarity of the corresponding channel

**(4) – On/Off switches**

to turn the corresponding channel on or off

**(10) – Hardware limit**

set screws  $V_{max}$  to set the maximum output voltage to the absolute maximum values of the channel ( $V_{nom}$ )

**(5) – Hardware limit**

set screws  $I_{max}$  to set the maximum current relatively to the absolute maximum values of the channel ( $I_{nom}$ )

**(11) – USB connector**

**(6) – Safety Loop connector**

**(7) – CAN connector**

**(7) – CAN connector**

**(8) – Single channel Inhibit connector**

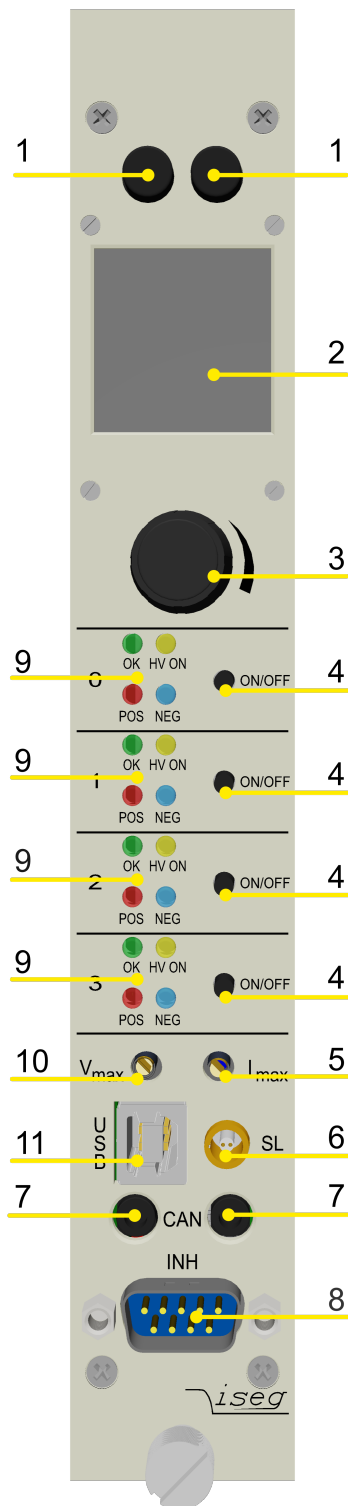


Figure 6: NHR 4channel front

## 5.2.1. Main Screen (Channel List)

After start up of the NHR the display will show a Main screen similar to the following image which consists of 5 elements:

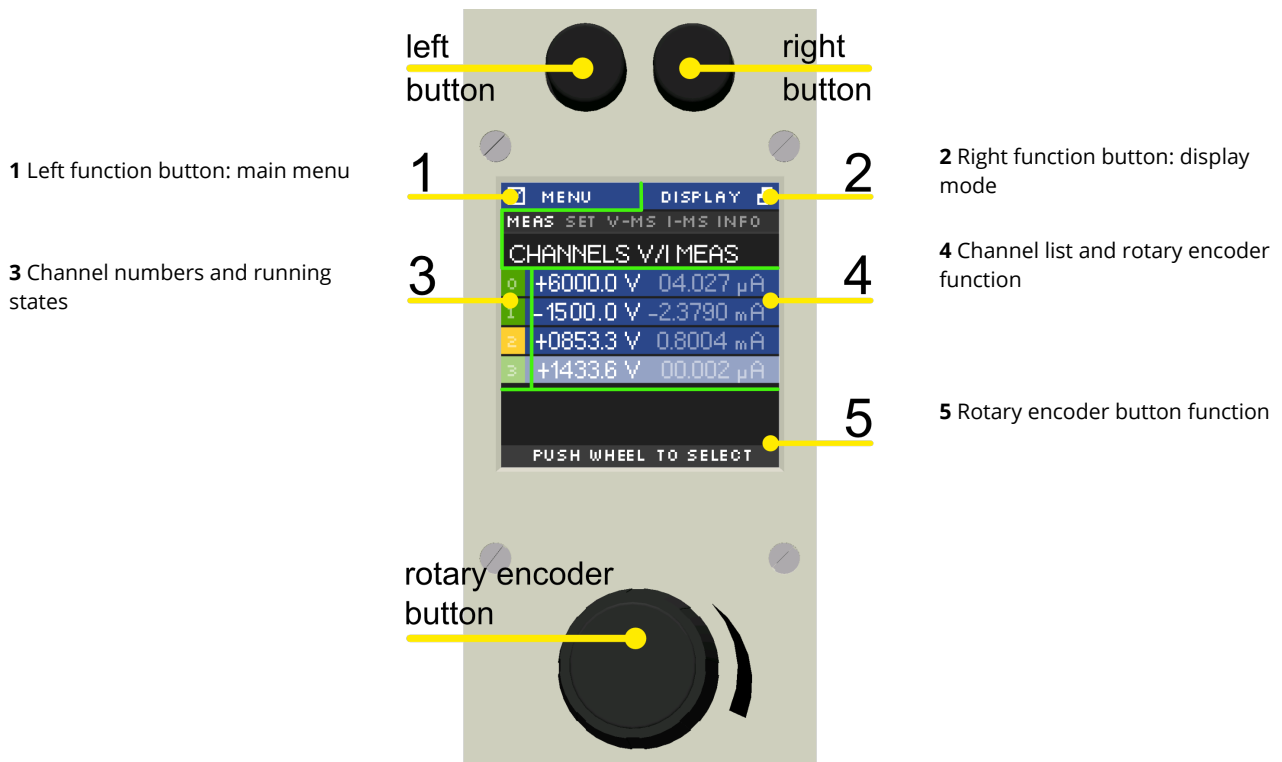


Figure 7: NHR front

### 1. Left function button: main menu

Shows the function of the left button. If the user pushes the left button in Main screen, the display will show the Menu screen.

### 2. Right function button: display mode

If the user pushes the right button in Main screen, the Main screen will switch to the next display mode, which is shown directly above the channel list.

Following display modes are available:

- |    |          |   |  |
|----|----------|---|--|
| 1. | V/I-MEAS | → | voltage and current – measured values      |
| 2. | V/I-SET  | → | voltage and current – set values           |
| 3. | V-MS     | → | voltage – measured and set values          |
| 4. | I-MS     | → | current – measured and set values          |
| 5. | INFO     | → | maximal values of the selected output mode |

### 3. Channel numbers and running states

This is part of the channel list (see 4 Channel list and rotary encoder function) and shows the corresponding channel number. The background color signals the running state of each channel. The background colors means the following:

|        |   |  |
|--------|---|--|
| Black  | → | the channel is switched off  |
| Green  | → | the channel is switched on   |
| Yellow | → | the channel is switched on but no regulation<br>( <u>CV</u> , <u>CC</u> , see 5.8.1 Constant Current Mode) is active |
| Orange | → | the channel is switched on but has unmasked error event(s)   |
| Red    | → | the channel has at least one masked error event  |

### 4. Channel list and rotary encoder function

The channel list shows-dependent on the display mode-measure and/or set values of voltage and current for each channel.

In display mode VI-MEAS the following can be seen:

If a channel is switched off, the values of  $V_{meas}$  and  $I_{meas}$  are grey.

If a channel is in constant voltage regulation,  $V_{meas}$  value is white and  $I_{meas}$  value is grey

If a channel is in constant current regulation,  $V_{meas}$  value is grey and  $I_{meas}$  value is white

The channel row which is slightly brighter (in channel 3) is the marked channel by the rotary encoder. Turning the rotary encoder counter-clockwise will mark the channel above the current channel and turning clockwise will mark the channel below the current channel.

### 5. Rotary encoder button function

If the user presses the button of the rotary encoder, the menu will switch to the channel menu of the marked channel.

## 5.2.2. Menu Screen

By pressing the left button in Main screen, the display will switch to the menu screen, that looks similar to the image below:

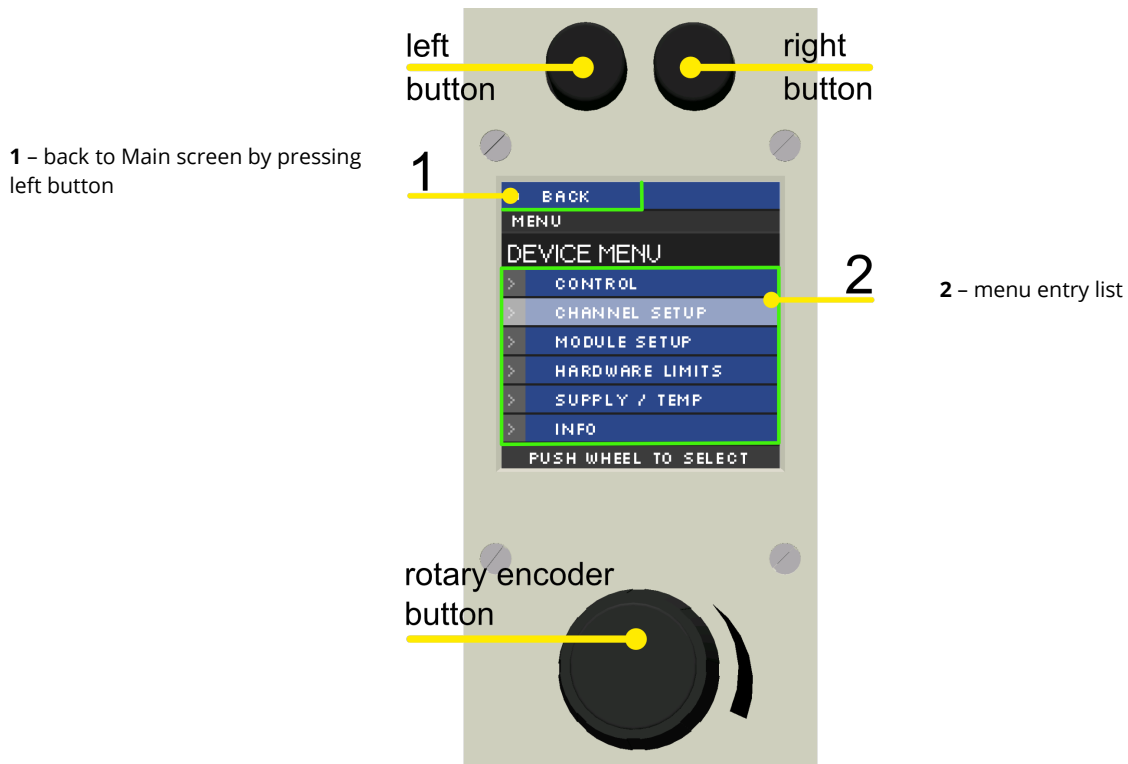


Figure 8

The menu screen shows menu entries to set up behavior and check information of the device hardware.

To enter a menu entry, the user has to mark an entry by turning rotary encoder and then pressing the rotary encoder button. The selected entry is then shown in the menu path.

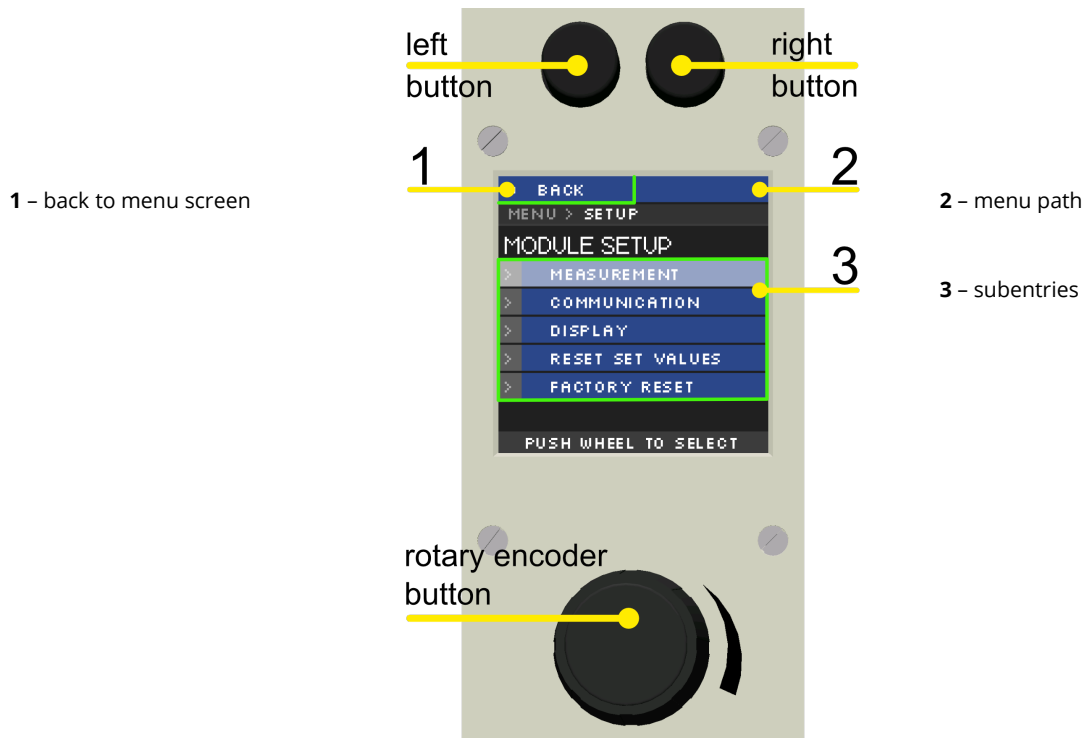


Figure 9



### 5.2.3. Editing Menu Entries

A Menu entry that has a fixed amount of possible values can be easily edited by turning the rotary encoder, the selected value will be shown at the bottom of display screen.

A submit and save of the selected value is done by pressing the rotary encoder button.

A reset to its default value is done by pressing the right button.

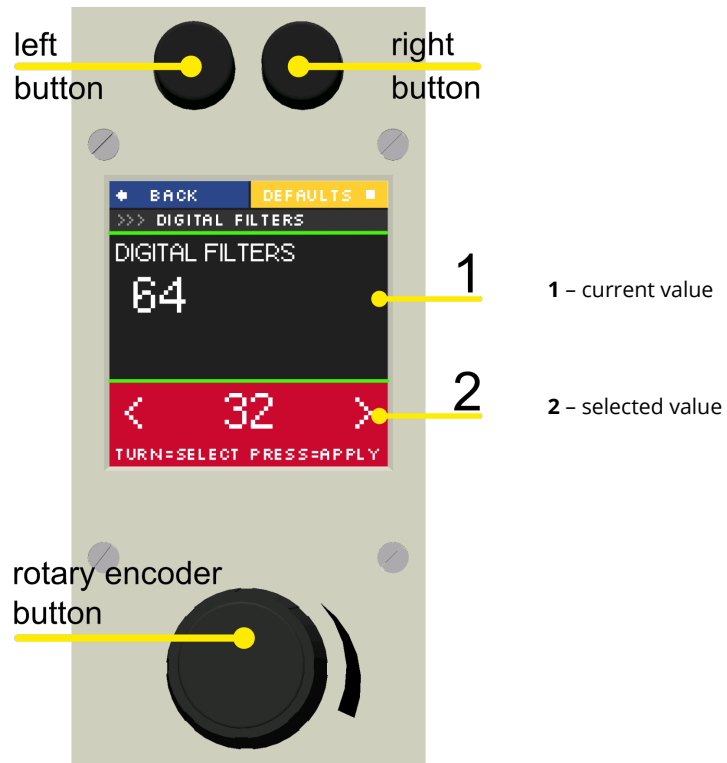


Figure 10


A menu entry with a none-fixed amount of values e.g. voltage ramp speed is edited a little bit different.

The selected value is also shown at the bottom of the display but with a digit highlighted by a cursor. A short press on the rotary encoder button and the cursor will jump to the next lower digit. Turning the rotary encoder changes the selected value in the resolution of the corresponding digit.

A submit and save of the selected value is done by pressing and holding the rotary encoder button for more than one second.

## 5.2.4. Channel Details

To change the set values of a channel or to monitor one single channel with larger digits, the Channel screen needs to be entered. This can be done in Main screen by turning the rotary encoder until the wished channel is marked and then pressing the rotary encoder button to select it. A screen similar to the following will be shown.

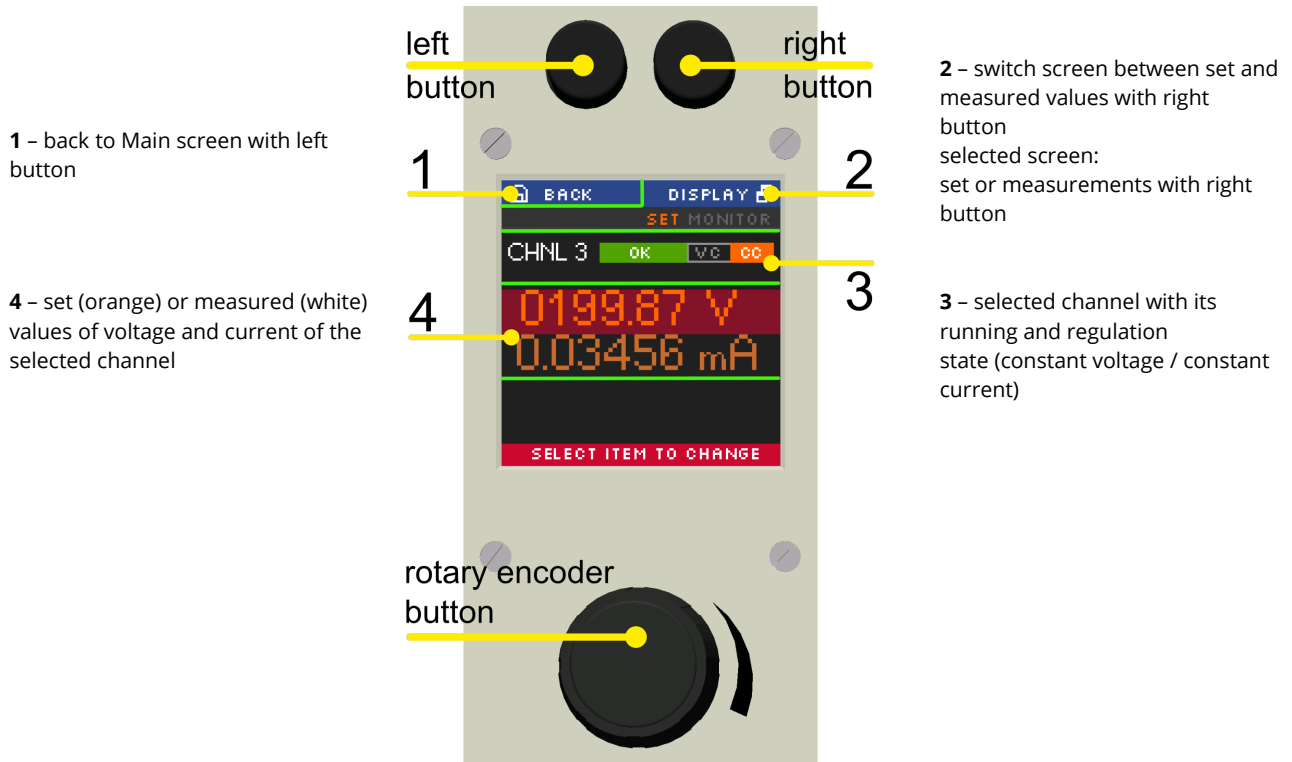

1 - back to Main screen with left button

4 - set (orange) or measured (white) values of voltage and current of the selected channel

2 - switch screen between set and measured values with right button  
selected screen:  
set or measurements with right button

3 - selected channel with its running and regulation state (constant voltage / constant current)

Figure 11

### 5.2.5. Editing Channel Set Values

In the channel screen it is possible to edit set values of the selected channel. This is done by marking current or voltage value by turning rotary encoder and applying this by pressing the rotary encoder button. An edit field beneath the shown values will be displayed.

The edit value is shown with a digit hi-lighted by a cursor. A short press on the rotary encoder button and the cursor will jump to the next lower digit. Turning the rotary encoder changes the selected value in the resolution of the digit.

Submit and apply of the edit value is done by pressing and holding the rotary encoder button for more than one second.

There are two modes of editing available: manual and auto-apply. In manual mode, the edited value is not accepted until the user applied it with pressing and holding the rotary encoder button. In auto-apply mode the edit value is immediately accepted as turning the rotary encoder.

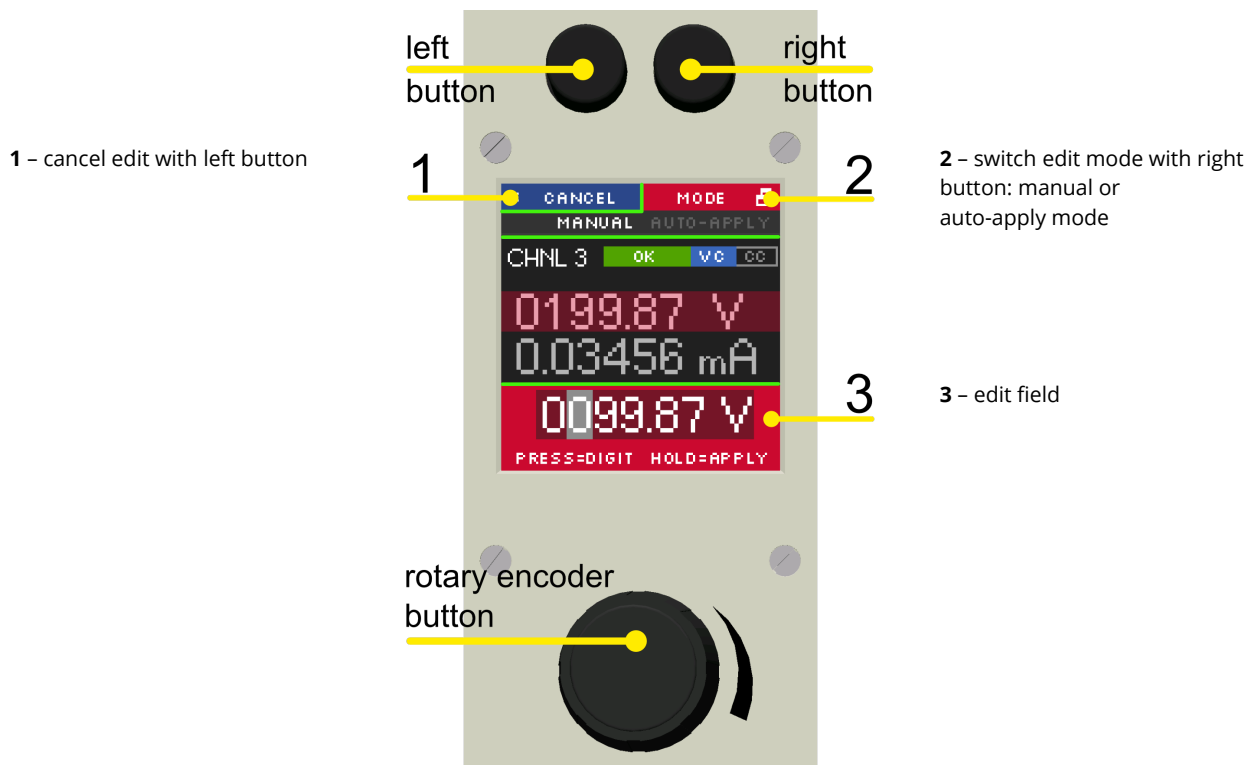


Figure 12

## 5.2.6. Menu Structure

Available Menu entries are:

| Entry           | Sub-entry           | Sub-entry                             | Content  |  |
|-----------------|---------------------|---------------------------------------|--|--|
| CONTROL         | VOLTAGE RAMP        | –                                     | Set voltage ramp speed   |  |
|                 | CURRENT RAMP        | –                                     | Set current ramp speed   |  |
|                 | CLEAR ALL EVENTS    | –                                     | Clear all events   |  |
|                 | SET KILL ENABLE     | –                                     | Set mode Kill Enable/Disable   |  |
|                 | DELAYED TRIP ACTION | –                                     | Enable and define action for delayed trip  |  |
|                 | DELAYED TRIP TIME   | –                                     | Set time for delayed trip  |  |
| CHANNEL SETUP   | ALL CHANNELS        | POLARITY                              | POS  | Set polarity of channel  |
|                 |                     |                                       | NEG  |  |
|                 | CHANNEL 0           | OUTPUT-MODE                           |  | Set <u>output-mode</u> of channel (see Table 7: Technical data: Options and order information) |
|                 | CHANNEL 1           |                                       |  |  |
|                 | CHANNEL 2           |                                       |  |  |
| CHANNEL 3       |                     |                                       |  |  |
| MODULE SETUP    | MEASUREMENT         | ADC SAMPLE RATE                       | Set ADC sample rate  |  |
|                 |                     | DIGITAL FILTER                        | Set digital filter steps   |  |
|                 | COMMUNICATION       | CAN BUS BITRATE                       | Set CAN bus bitrate  |  |
|                 |                     | CAN BUS ADDRESS                       | Set CAN bus ID   |  |
|                 |                     | CAN BUS STATUS                        | Show the CAN BUS Bitrate, Address, Connect, RX and TX Information  |  |
|                 | DISPLAY             | POWER SAVE                            | Set display power safe mode  |  |
|                 | RESET SET VALUES    | –                                     | Reset all set values   |  |
| FACTORY RESET   | –                   | Reset all settings to factory default |  |  |
| HARDWARE LIMITS | –                   | –                                     | Shows hardware limits $V_{max}$ and $I_{max}$ . This screen is automatically shown, if the hardware limits were changed. |  |
| SUPPLY / TEMP   | –                   | –                                     | Shows supply voltages and temperature  |  |
| INFO            | –                   | –                                     | Shows serial number, firmware name and release, nominal voltage and current  |  |

Table 8: Menu Structure

## 5.3 Channel Switches and LEDs

The front panel of the NHR device is equipped for each channel with a “On/Off” switch to turn the channel on and off, two status LEDs (“OK” and “HV ON”) and two LEDs (“POS” and “NEG”) to indicate the selected polarity.

The green LED “OK” signals the general condition of the channel and the yellow LED “HV ON” signals measured output voltage at the corresponding channel or is flashing shortly every time the user presses the corresponding “On/Off” switch.

Following behaviors are possible:

| LED “OK”        | LED “HV ON”     | Meaning   |
|-----------------|-----------------|---|
| not illuminated | not illuminated | An error event occurred, the channel cannot be switched on.             |
| not illuminated | illuminated     | An error occurred but there is still a measured voltage at the channel. |
| illuminated     | not illuminated | The channel is switched off and can be turned on.                       |
| illuminated     | illuminated     | The channel is turned on and there is output voltage at the channel.    |
|                 | flashing        | The channel is ramping up or down                                       |

Table 9: LED Status information

## 5.4 Remote Control

The NHR devices offer two remote control interfaces: USB and CAN.

With the USB connector, one NHR can be controlled with the “iseq SCPI instruction set” (see chapter “5.1. SCPI Instruction Set”). Available control applications are “[iseqTERMINAL](#)” and “[iseq SCPI Control](#)”. Please consider the “SCPI Programmers-Guide” (see chapter 12 Appendix) for further details.

With the CAN interface connectors, up to 64 NHR/NHS devices can be controlled on one CAN line. Therefore every device has to have a unique CAN Bus address, which can be configured in the Device Menu. Please consider “CAN EDCP Programmers-Guide” (see chapter 12 Appendix) for further details.

## 5.5 Polarity and Output-Mode selection

For all channels of NHR devices the polarity can be electronically switched. This can be done via the front panel (*MENU → CHANNEL SETUP → CHANNEL X → POLARITY*) or via remote control.

Modules with  $V_{nom} = 6kV$  (except option **L**) also provide switchable HV-output modes which allow to switch the nominal values of a channel between 2kV/4mA, 4kV/3mA and 6kV/2mA. This can be done via the front panel (*MENU → CHANNEL SETUP → CHANNEL X → OUTPUT-MODE*) or via remote control.

Switching the polarity or output mode is only allowed if the corresponding channel is switched off and discharged below  $0.002 \cdot V_{nom}$ . The module blocks all switching attempts if these conditions are not satisfied.

### CAUTION!



CAUTION!

The device is not designed to operate as a current sink.  
 Never apply external voltages of opposite polarity to the selected one or with values greater than the maximum value of the selected output mode. This can damage the module.

## 5.6 Protection Features

### 5.6.1. Hardware Limit

The maximum output voltage for all channels (hardware voltage limit) is defined through the position of the corresponding potentiometer  $V_{\max}$ . The maximum output current for all channels (hardware current limit) is defined through the position of the corresponding potentiometer  $I_{\max}$ . The greatest possible set value for voltage and current is given by  $V_{\max} - 2\%$  and  $I_{\max} - 2\%$ , respectively. The percentage values always refer to the nominal values of the channel,  $V_{\text{nom}}$  and  $I_{\text{nom}}$ . E.g. for a 6kV/4mA module the reference values are 6kV and 4mA, independent of the selected output mode. The output voltage and current are limited to the specified value. If the maximum voltage or current of the selected output mode ( $V_{\text{mode}}$  or  $I_{\text{mode}}$ ) is below this limit, this will further limit the output.

If a limit is reached or exceeded in any channel the corresponding green LED on the front panel turns off.


### 5.6.2. Safety Loop

A safety loop can be implemented via the safety loop socket (SL) on the front panel, see Figure 6: NHR 4channel front.

If the safety loop is active, then an output voltage in any channel is only present if the safety loop is closed and an external current in a range of 5 to 20 mA of any polarity is driven through the loop. The loop connectors (Figure 20) are potential free, the internal voltage drop is approx. 3 V.

If the safety loop is opened during the operation, the output voltages are shut off without ramp. Furthermore, the corresponding bits in the „*ModuleStatus*“ and „*ModuleEventStatus*“ registers are set (“CAN EDCP Programmers-Guide”, see chapter 12 Appendix). After closing the loop again, the „*ModuleEventStatus*“ register must be reset to turn the channels on again. By factory setup the safety loop is not active (the corresponding bits are always set). The loop can be activated by removing the internal jumper. The jumper can be accessed via a ventilation slot on the bottom of the module. See Figure 5: back side for exact position.

### 5.6.3. Single channel Inhibit

| INFORMATION  |   |
|--|---|
| <br>INFORMATION | INHIBIT is an external signal, that switches off the high voltage for the device or a specific channel. |

The Sub-D connector on the bottom of the front panel allows to install an Inhibit for each channel. The pin assignment is as follows:

|                      |   |   |   |   |     |   |   |   |   |
|----------------------|---|---|---|---|-----|---|---|---|---|
| Channel 0 – 3 / GND  | 0 | 1 | 2 | 3 | GND |   |   |   |   |
| SUB-D9 connector pin | 1 | 2 | 3 | 4 | 5   | 6 | 7 | 8 | 9 |

Table 10: INHIBIT connector pinout

The INHIBIT signals are TTL-level, the signal logic is defined by selected option. The following configurations are possible:

#### Option 1 – IU (default)

INHIBIT signal logic:      LOW-active (LOW → HV-generation stopped)  
 default state:               HIGH (internal pull-up resistor applied)  
 open INHIBIT signal input: HV enabled

#### Option 2 – ID

INHIBIT signal logic:      LOW-active (LOW → HV-generation stopped)  
 default state:               LOW (internal pull-down resistor applied)  
 open INHIBIT signal input: HV disabled

#### Option 3 – NIU

INHIBIT signal logic:      HIGH-active (HIGH → HV-generation stopped)  
 default state:               HIGH (internal pull-up resistor applied)  
 open INHIBIT signal input: HV disabled

#### Option 4 – NID

INHIBIT signal logic:      HIGH-active (HIGH → HV-generation stopped)  
 default state:               LOW (internal pull-down resistor applied)  
 open INHIBIT signal input: HV enabled

The INHIBIT signal must be applied for at least 100 ms to guarantee a detection. If an Inhibit signal is detected, the channel status bit "*isExternalInhibit*" and the channel event status bit "*EExternalInhibit*" are set. One of the following reactions to this signal can be programmed (see chapter "3.5.1.11 External channel inhibit" in the "CAN EDCP Programmers-Guide", see chapter 12 Appendix)

- No Action (default)
- Turn off the channel with ramp
- Shut down the channel without ramp
- Shut down all channels without ramp

When the INHIBIT is no longer active, the Inhibit flag must be reset before the voltage can be switched on again.

## 5.7 Floating GND configuration

The NHR module is a module with Common Floating Ground (CFG). All HV-channels have a common return potential (module GND), which is galvanically isolated from the crate GND. A protection circuit prevents differences between the two GND potentials of more than 56V. The galvanic isolation can be removed by placing a jumper on a two-pin connector located in a ventilation slot on the top of the module (see Fehler: Verweis nicht gefunden for exact position).

The GND of the digital interfaces (USB and CAN) is isolated from both, the module GND and the crate GND.

## 5.8 Current limitation

### 5.8.1. Constant Current Mode

The Constant Current Mode (CC) is the default response on an increased output current. If the output current would exceed the set current ( $I_{set}$ ) at the specified set voltage ( $V_{set}$ ) the channel operates as a constant current source at  $I_{set}$ . For modules with one current measurement range the module can operate in CC Mode for  $I_{set}$  values in the range  $I_{nom} \geq I_{set} \geq 5E-04 \cdot I_{nom}$ . Although the modules accepts smaller values  $I_{set}$ , the CC Mode can only operate down to the given limitation. Smaller set value will only affect the functions KillEnable and Delayed Trip, described below.

Modules with two current measurement ranges can operate in CC Mode with  $I_{set}$  values down to 200 nA. The following limitations must be considered when operating a channel with  $I_{set}$  values in the lower current measurement range (i.e. typically  $<20\mu A$ ):

- If  $I_{set} < 20\mu A$  the maximum voltage ramp speed is limited to 1 % of  $V_{nom}$ . If the load has a significant capacitance it might be necessary to further reduce the voltage ramp speed to avoid ramp instabilities.
- While a channel is operating in CC Mode it is not possible to switch between the two current measurement ranges, i.e. the set current cannot be changed from a value  $> 20 \mu A$  to a value  $< 20 \mu A$  or vice versa. To change the set current across the measurement range boundary the channel must stop operation in CC mode (i.e. by switching off the channel or reducing the voltage such, that it operates in Constant Voltage Mode (CV)).

### 5.8.2. KillEnable

The function "KillEnable" forces the shut down of a channel at the fastest hardware response time (smaller than 1 ms) if a specified trip current is exceeded. If "KillEnable" is active the value of the set current ( $I_{set}$ ) defines the trip current. An approach or exceed of this current (detected by a hardware signal) will immediately shut off the channel without ramp. However, the actual discharge time strongly depends on the connected load.

The following limitations must be considered if the function "KillEnable" is activated:

- Maximum voltage ramp speed is limited to 1 % of  $V_{nom}$ . To avoid unintended current trips during ramps it might be necessary to further reduce the ramp speed for very small trip currents or capacitive loads. Alternatively "KillEnable" can be activated only after the completion of the ramp.
- The minimum trip currents for a hardware detection is  $5E-04 \cdot I_{nom}$  for modules with one current measurement range and 200 nA for modules with two current measurement ranges. It is possible to specify smaller trip values, however there is no hardware current limitation below the hardware detection limits. Also, the response time on a trip that does not trigger the hardware detection can be up to 1s.
- Modules with two current measurement ranges do not change the current measurement range if "KillEnable" is active. The channel remains in the high measurement range if  $I_{set} > 20\mu A$  and in the low measurement range for  $I_{set} \leq 20\mu A$ . It is not possible to switch the current measurement while a channel is switched on and "KillEnable" is active, i.e. the set current cannot be changed from a value  $> 20 \mu A$  to a value  $< 20 \mu A$  or vice versa. If it is intended to switch the current measurement range, the channel must be switched off or "KillEnable" must be deactivated for altering the current set value.



### 5.8.3. Delayed Trip

The function "Delayed Trip" provides a user-configurable, time-delayed response to an increased output current ( $I_{out}$ ) higher than the set current ( $I_{set}$ ). The response to this kind of event can be, for example, to ramp down the channel with the programmed ramp. A detailed description for the configuration can be found in the "CAN EDCP Programmers-Guide", see chapter 12 Appendix.

By a programmable timeout with one millisecond resolution, the trip can be delayed up to four seconds. During this time, the output current is limited to the value of  $I_{set}$  (constant current mode).

The hardware regulation signals, constant voltage (CV) or constant current (CC), are sampled every millisecond by the microprocessor. Once the constant current mode is active, the programmed timeout counter is decremented. If the HV channel returns to constant voltage mode before timeout (i.e.  $I_{out} < I_{set}$ ), the counter will be reset. So this process can be restarted if the current rises again.

To guarantee a sufficient resolution for the current set values, a nominal current adequate to the application should be selected. iseg offers HV modules with nominal currents reduced to 100  $\mu$ A in all voltage classes. These are designated e.g. for semiconductor detectors, which only require a few microampere operating current.

#### INFORMATION



INFORMATION

An activated KillEnable feature disables the Delayed Trip function.

## 6. Options

### 6.1 VCT – voltage correction by temperature

This option allows a temperature dependent correction of the output voltage. The temperatures are measured with a distinct sensor for each channel. An user-adjustable VCT-coefficient allows to specify a linear relationship between the measured temperature and the output voltage. As an option one sensor per module can be ordered, see 10 Accessories.

#### 6.1.1. Technical data

|  |                       |
|--|-----------------------|
| <b>Sensor type</b>                           | EPCOS B57867S0502F140 |
| <b>Temperature range</b>                     | -40 ... 80°C          |
| <b>Accuracy of temperature measurement</b>   | ±0.5 K (0 ... 60°C)   |
| <b>Resolution of temperature measurement</b> | 1 mK (0 ... 60°C)     |
| <b>Temperature update rate</b>               | 15 updates/min        |

Table 11: Technical data VCT sensor

#### 6.1.2. Operation

The connector (Z585877) of the temperature sensor must be plugged in the slot of the corresponding channel on the VCT-connector at the rear panel (see Figure 15: back plane with Option VCT, 2 ch module or Figure 16: back plane with Option VCT, 4 ch module) of the HV-module.

A programmable VCT-coefficient for each channel defines the rate and the direction of the voltage correction. The temperatures, measured at the sensors can be read out from the module.

At the time a HV-channel is switched on or the output voltage is set by the user, the module registers the temperature ( $T_{ref}$ ) of the corresponding sensor and the set voltage as reference values.

If the temperature ( $T$ ) at the sensor changes, the output voltage is automatically adjusted according to the formula:

$$V = V_{ref} + a \cdot (T - T_{ref})$$

a: VCT-coefficient

Example: A channel is set to 60V. At the time it is switched on a temperature of 25°C is measured. The VCT-coefficient is set to +1V/K. If the temperature now increases to 26°C the output voltage will increase to 61V. (For channels with a negative output voltage the voltage changes from -60V to -61V).

A VCT-coefficient of -1V/K would decrease the voltage to 59V.

Notes:

- During operation the values for  $V_{set}$  are adjusted. If a channel is switched off the adjusted set value will be kept, not the original value set by the user.
- If the VCT-coefficient is modified during operation,  $V_{ref}$  and  $T_{ref}$  are reset to the present values to prevent a sudden voltage change.
- If the temperature sensor is dis- and reconnected during operation,  $V_{ref}$  and  $T_{ref}$  are reset to the present values to prevent a sudden voltage change.
- The temperature dependent voltage correction can be deactivated by setting the VCT-coefficient to 0 or by disconnecting the temperature sensor. If this is done during operation, the channel will keep the actual voltage set.
- If the temperature sensor is disconnected a temperature of -273.15°C is shown for that channel.
- The VCT data points are described in the reference manual "CAN EDCP Programmers-Guide" (see chapter 12 Appendix) and in the manual "iseg Hardware Abstraction Layer" (see chapter 12 Appendix).

## 6.2 Single Channel Inhibit (IU, ID, NIU, NID)

### INFORMATION



INFORMATION

INHIBIT is an external signal, that switches off the high voltage for the device or a specific channel.

This option specifies the logic of single channel INHIBIT signal see chapter 5.6.3 Single channel Inhibit for details.

## 6.3 L – Lower output current (HP only)

The output current is limited to a lower value, e.g. 100  $\mu$ A. With this option only one current measurement range available.

## 6.4 T10 – Lower temperature coefficient (HP only)

Improved temperature coefficient of 10ppm/K.

## 7. Dimensional drawings

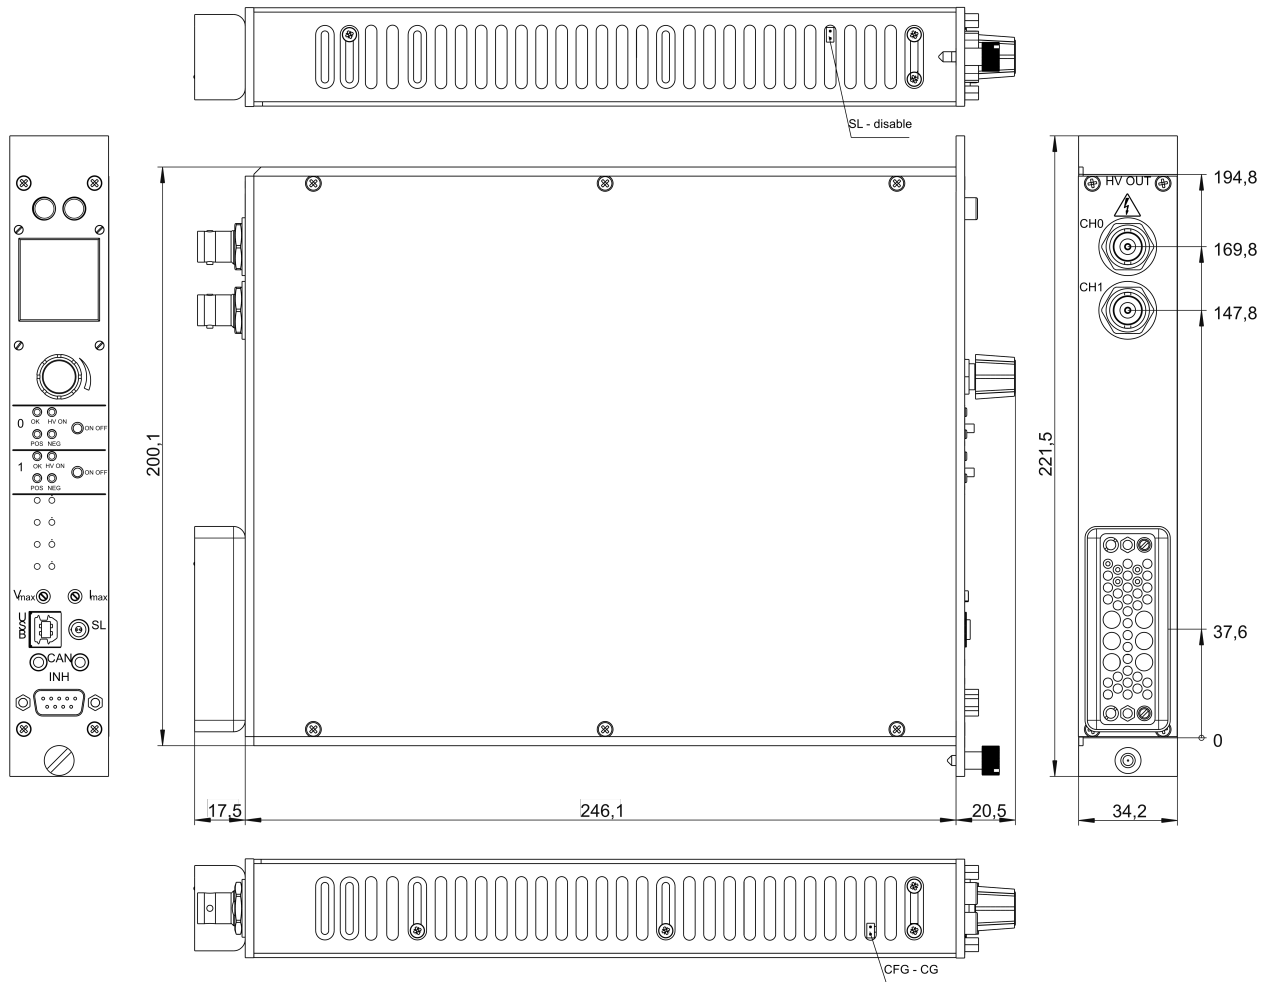


Figure 13: Dimensional drawings, NHR 2 channels

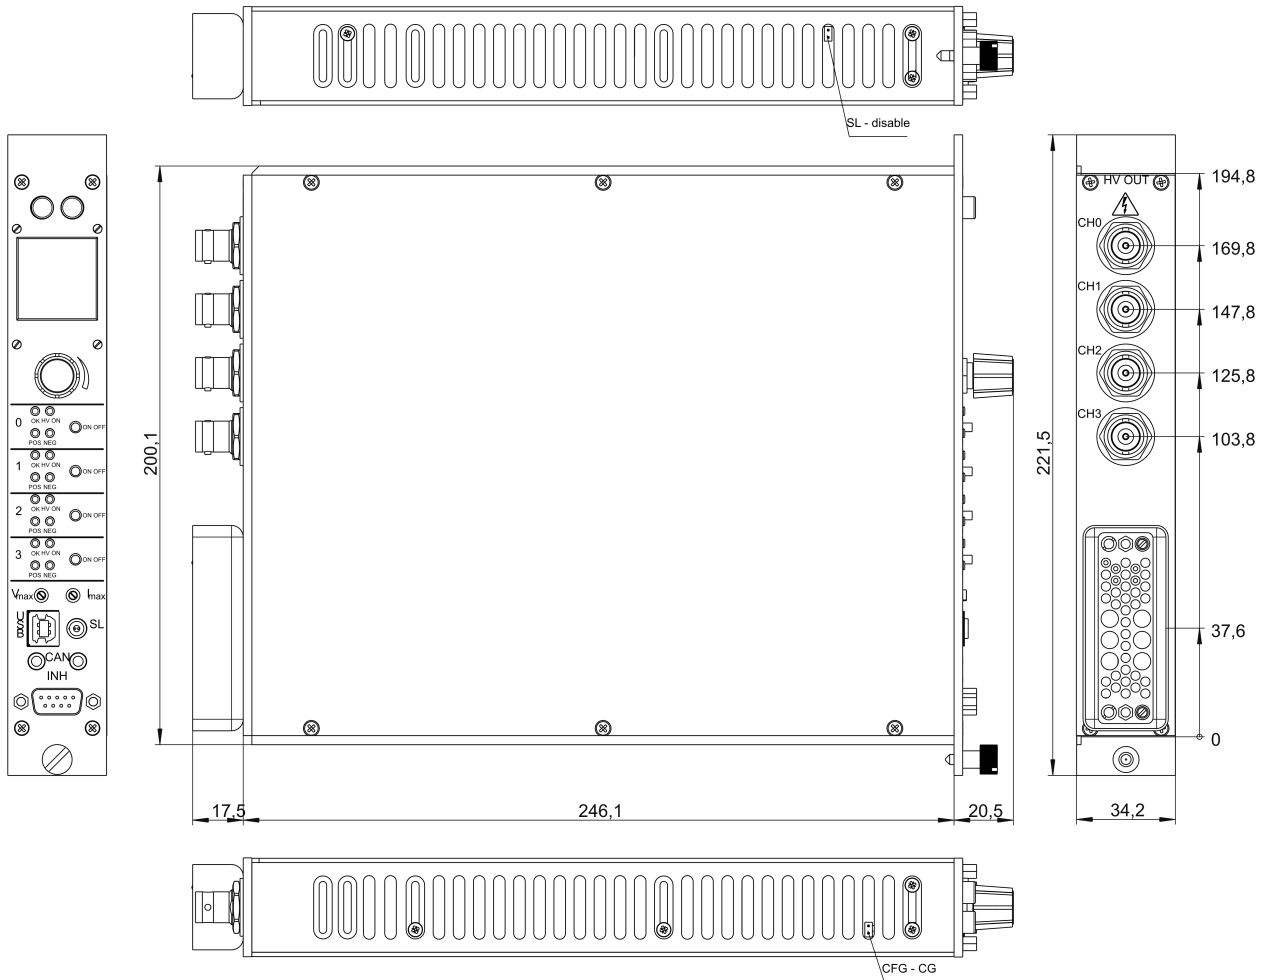


Figure 14: Dimensional drawings, NHR 4 channels

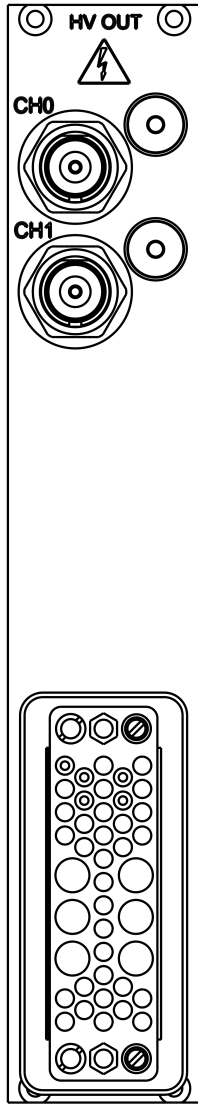


Figure 15: back plane with Option VCT, 2 ch module

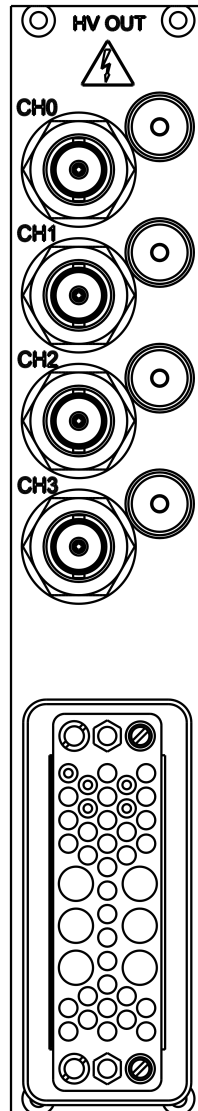


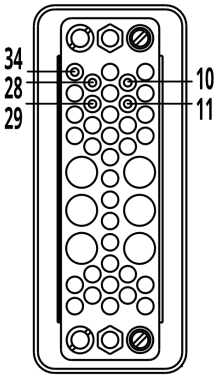



Figure 16: back plane with Option VCT, 4 ch module

## 8. Connectors assignments

| CONNECTORS – POWER SIDE   |                  | PART NUMBERS<br>(manufacturer code / iseg accessory parts item code) |  |
|---|------------------|--|--|
| <b>SHV</b>  |                  | <b>CABLE SIDE</b>  |  |
| <br>Figure 17              | part number      | R317.005.000   |  |
|   | manufacturer     | Radiall  |  |
|   | iseg part number | Z592474  |  |
| <b>D-SUB9 – male</b>  |                  | <b>CABLE SIDE</b>  |  |
| PIN 1<br><br>Figure 18     | connector        | D SUD9   |  |
|   | manufacturer     | various manufacturer   |  |
|   | iseg part number |  |  |
| <b>NIM</b>  |                  | <b>CABLE SIDE</b>  |  |
| <br>Figure 19             | connector        | NIM Standard   |  |
|   | manufacturer     | various manufacturer   |  |
|   | iseg part number | Z200280 without contacts   |  |
| <b>Safety Loop</b>  |                  | <b>CABLE SIDE</b>  |  |
| 1 2 PIN<br><br>Figure 20 | part number      | FGG.00.302.CLAD30  |  |
|   | manufacturer     | LEMO Elektronik GmbH   |  |
|   | iseg part number | Z201466  |  |



| CONNECTORS – POWER SIDE  |                  | PART NUMBERS<br>(manufacturer code / iseg accessory parts item code) |  |
|--|------------------|--|--|
| <b>CAN – Jack Plug 3,5 mm</b>  |                  | <b>CABLE SIDE</b>  |  |
| <br>Figure 21 | connector        | TRS Jack plug 3,5 mm   |  |
|  | manufacturer     | various manufacturer   |  |
|  | iseg part number | Z592811  |  |
| <b>Option VCT – Jack Plug 2,5 mm</b>   |                  | <b>CABLE SIDE</b>  |  |
| <br>Figure 22 | connector        | TS Jack plug 2,5 mm  |  |
|  | manufacturer     | various manufacturer   |  |
|  | iseg part number | Z592774  |  |

Table 12: Connector and pin assignments

## 9. PIN assignments

### 9.1 Safety Loop

| PIN | NAME | DESCRIPTION |
|-----|------|-------------|
| 1   | SL   | Safety loop |
| 2   | SL   | Safety loop |

### 9.2 CAN

| PIN | NAME   | DESCRIPTION |
|-----|--------|-------------|
| T   | Tip    | CAN HIGH    |
| R   | Ring   | CAN LOW     |
| S   | Sleeve | GND         |

### 9.3 NIM standard compliant connector

| PIN | NAME  | DESCRIPTION  |
|-----|-------|--------------|
| 28  | +24 V | Power supply |
| 29  | -24 V | Power supply |
| 34  | GND   | Ground       |



## 9.4 VTC

| PIN | NAME   | DESCRIPTION |
|-----|--------|-------------|
| T   | Tip    | Signal      |
| S   | Sleeve | GND         |

## 9.5 Inhibit

| PIN | NAME      | DESCRIPTION |
|-----|-----------|-------------|
| 1   | CHANNEL 0 | CHANNEL 0   |
| 2   | CHANNEL 1 | CHANNEL 1   |
| 3   | CHANNEL 2 | CHANNEL 2   |
| 4   | CHANNEL 3 | CHANNEL 3   |
| 5   | GND       | GND         |
| 6   | GND       | GND         |
| 7   | GND       | GND         |
| 8   | GND       | GND         |
| 9   | GND       | GND         |

## 10. Accessories

### CAUTION!



CAUTION!

Only use genuine iseg parts like power cables, CAN cables and terminators for stable and safe operation.

| ACCESSORY ITEM  | ORDER ITEM CODE |
|---|-----------------|
| CAN to host: from Jack plug 3.5mm to D-SUB female, length: 1m           | Z515404         |
| CAN daisy-chain: from Jack plug 3.5mm to Jack plug 3.5mm, length: 0,15m | Z515554         |
| VCT Sensor cable: from Jack plug 2.5mm (2pol) to Probe, length: 10m     | Z585877         |
| Can Bus termination Jack plug 3.5mm (120 Ω)                             | Z515405         |

Table 13: Accessory

## 11. Order guides

| CABLE ORDER GUIDE  |           |            |                                       |                     |   |
|--|-----------|------------|---------------------------------------|---------------------|---|
| POWER SUPPLY SIDE CONNECTOR  | $V_{max}$ | CABLE CODE | CABLE DESCRIPTION                     | LOAD SIDE CONNECTOR | ORDER CODE<br><i>LLL = length in m<sup>01</sup></i> |
| SHV  | ≤ 5kV     | 04         | HV cable shielded 30kV (HTV-30S-22-2) | open                | SHV_C04-LLL   |
| S08  | ≤ 8kV     | 04         | HV cable shielded 30kV (HTV-30S-22-2) | open                | S08_C04-LLL   |
| Notes:<br>1) Length building examples: 10cm → 0.1, 2.5m → 2.5, 12m → 012, 999m → 999 |           |            |                                       |                     |   |

Table 14: Guideline for cable ordering

| CONFIGURATION ORDER GUIDE (item code parts) |                      |                                    |  |                |   |   |              |   |                                   |
|---|----------------------|------------------------------------|--|----------------|---|---|--------------|---|-----------------------------------|
| NR  | 04                   | 0                                  | 020  | R              | 605   | 000   | 02           | 0   | 0                                 |
| High Voltage, Distinct Source               | Numbers of channels  | Class                              | $V_{nom}$  | Polarity       | $I_{nom}$ (nA)  | Option (hex)  | HV-Connector | Revision  | Customized Version                |
|   | 02 = 2ch<br>04 = 4ch | 0 = Standard<br>4 = High Precision | three significant digits • 100V<br><br>For Example:<br>020 = 2000V | R = reversible | two significant digits + number of zeros<br><br>For Example:<br>605 = 6mA | Sum of the hex codes (see Table 7: Technical data: Options and order information) | 02 = SHV     | one digit<br>0 = no revision<br>A = first revision<br>B = second revision | one digit<br>0 = no customization |

Table 15: Item code parts for different configurations

## 12. Appendix

For more information please use the following download links:

|   |   |
|---|---|
| <b>This document</b>  |   |
| <a href="https://iseq-hv.com/download/SYSTEMS/NIM/NHR/iseq_manual_NHR_en.pdf">https://iseq-hv.com/download/SYSTEMS/NIM/NHR/iseq_manual_NHR_en.pdf</a>                                     |   |
| <b>iCS (iseq Communication Server)</b>  |   |
| <a href="https://iseq-hv.com/download/?dir=SOFTWARE/iCS">https://iseq-hv.com/download/?dir=SOFTWARE/iCS</a>   |   |
| <b>SCPI Programmers-Guide</b>   |   |
| <a href="https://iseq-hv.com/download/SOFTWARE/iseqSCPI/SCPI_Programmers_Guide_en.pdf">https://iseq-hv.com/download/SOFTWARE/iseqSCPI/SCPI_Programmers_Guide_en.pdf</a>                   |   |
| <b>CAN EDCP Programmers-Guide</b>   |   |
| <a href="https://iseq-hv.com/download/SOFTWARE/iseqEDCP/CAN_EDCP_Programmers-Guide.pdf">https://iseq-hv.com/download/SOFTWARE/iseqEDCP/CAN_EDCP_Programmers-Guide.pdf</a>                 |   |
| <b>iseqHAL (Hardware Abstraction Layer)</b>   |   |
| <a href="https://iseq-hv.com/download/SOFTWARE/iCS/doc/iseqHAL/index.html">https://iseq-hv.com/download/SOFTWARE/iCS/doc/iseqHAL/index.html</a>   |   |
| <b>iCSservice-API</b>   |   |
| <a href="https://iseq-hv.com/download/SOFTWARE/iCS/doc/iCSservice/iCSapiWebsocket_Docu.html">https://iseq-hv.com/download/SOFTWARE/iCS/doc/iCSservice/iCSapiWebsocket_Docu.html</a>       |   |
| <a href="https://iseq-hv.com/download/SOFTWARE/iCS/doc/iCSservice/iCSapiWebsocket_Example.html">https://iseq-hv.com/download/SOFTWARE/iCS/doc/iCSservice/iCSapiWebsocket_Example.html</a> |   |
| <b>iseqIOC (EPICS Input / Output Controller)</b>  |   |
| <a href="https://iseq-hv.com/download/SOFTWARE/iCS/doc/iseqIOC/iseqIOC_doc.pdf">https://iseq-hv.com/download/SOFTWARE/iCS/doc/iseqIOC/iseqIOC_doc.pdf</a>                                 |   |
| <a href="https://iseq-hv.com/download/SOFTWARE/iCS/doc/iseqIOC/iseqIOC_sampleScript.zip">https://iseq-hv.com/download/SOFTWARE/iCS/doc/iseqIOC/iseqIOC_sampleScript.zip</a>               |   |
| <b>iseqTERMINAL</b>   |   |
| <a href="https://iseq-hv.com/download/?dir=SOFTWARE/iseqTERMINAL/current">https://iseq-hv.com/download/?dir=SOFTWARE/iseqTERMINAL/current</a>   |   |
| <b>iseq SCPI Control</b>  |   |
| <a href="https://iseq-hv.com/download/?dir=SOFTWARE/iseqSCPIcontrol/current/">https://iseq-hv.com/download/?dir=SOFTWARE/iseqSCPIcontrol/current/</a>                                     |   |
| <b>Iseq SNMP control</b>  |   |
| <a href="https://iseq-hv.com/download/?dir=SOFTWARE/iseqSNMPcontrol/current/">https://iseq-hv.com/download/?dir=SOFTWARE/iseqSNMPcontrol/current/</a>                                     |   |
| Manufacturers website (connectors)  |   |
| LEMO Elektronik GmbH  | <a href="https://www.lemo.com/">https://www.lemo.com/</a>       |
| Radiall   | <a href="https://www.radiall.com/">https://www.radiall.com/</a> |

## 13. Glossary

| SHORTCUT                             | MEANING  |
|--------------------------------------|--|
| $V_{nom}$                            | nominal output voltage   |
| $V_{out}$                            | output voltage   |
| $V_{set}$                            | set value of output voltage  |
| $V_{mon}$                            | monitor voltage of output voltage  |
| $V_{meas}$                           | digital measured value of output voltage                                   |
| $V_{p-p}$                            | peak to peak ripple voltage  |
| $V_{in}$                             | input / supply voltage   |
| $V_{type}$                           | type of output voltage (AC, DC)  |
| $V_{ref}$                            | internal reference voltage   |
| $V_{max}$                            | limit (max.) value of output voltage                                       |
| $V_{limit}$                          | voltage limit  |
| $\Delta V_{out} - [\Delta V_{in}]$   | deviation of $V_{out}$ depending on variation of supply voltage            |
| $\Delta V_{out} - [\Delta R_{load}]$ | deviation of $V_{out}$ depending on variation of output load               |
| $V_{bounds}$                         | voltage bounds, a tolerance tube $V_{set} \pm V_{bounds}$ around $V_{set}$ |
| $I_{nom}$                            | nominal output current   |
| $I_{out}$                            | output current   |
| $I_{set}$                            | set value of output current  |
| $I_{mon}$                            | monitor voltage of output current  |
| $I_{meas}$                           | digital measured value of current  |
| $I_{trip}$                           | current limit to shut down the output voltage                              |
| $I_{in}$                             | input / supply current   |
| $I_{max}$                            | limit (max.) value of output current                                       |
| $I_{limit}$                          | current limit  |
| $I_{bounds}$                         | current bounds, a tolerance tube $I_{set} \pm I_{bounds}$ around $I_{set}$ |
| $P_{nom}$                            | nominal output power   |
| $P_{in}$                             | input power  |
| $P_{in\_nom}$                        | nominal input power  |
| T                                    | temperature  |
| $T_{REF}$                            | reference temperature  |
| ON                                   | HV ON  |
| OFF                                  | HV OFF   |
| CH                                   | channel(s)   |
| HV                                   | high voltage   |
| LV                                   | low voltage  |
| GND                                  | signal ground  |
| INH                                  | Inhibit  |
| POL                                  | Polarity   |
| KILL                                 | KillEnable   |

## 14. Warranty & Service

This device is made with high care and quality assurance methods. The standard factory warranty is 36 months. Please contact the iseg sales department if you wish to extend the warranty.

### CAUTION!



CAUTION!

Repair and maintenance may only be performed by trained and authorized personnel.

For repair please follow the RMA instructions on our website: [www.iseg-hv.com/en/support/rma](http://www.iseg-hv.com/en/support/rma)

## 15. Disposal

### INFORMATION



INFORMATION

All high-voltage equipment and integrated components are largely made of recyclable materials. Do not dispose the device with regular residual waste. Please use the recycling and disposal facilities for electrical and electronic equipment available in your country.

## 16. Manufacturer contact

**iseg Spezialelektronik GmbH**

Bautzner Landstr. 23

01454 Radeberg / OT Rossendorf

GERMANY

FON: +49 351 26996-0 | FAX: +49 351 26996-21

[www.iseg-hv.com](http://www.iseg-hv.com) | [info@iseg-hv.de](mailto:info@iseg-hv.de) | [sales@iseg-hv.de](mailto:sales@iseg-hv.de)